


Panel Opening Instructions

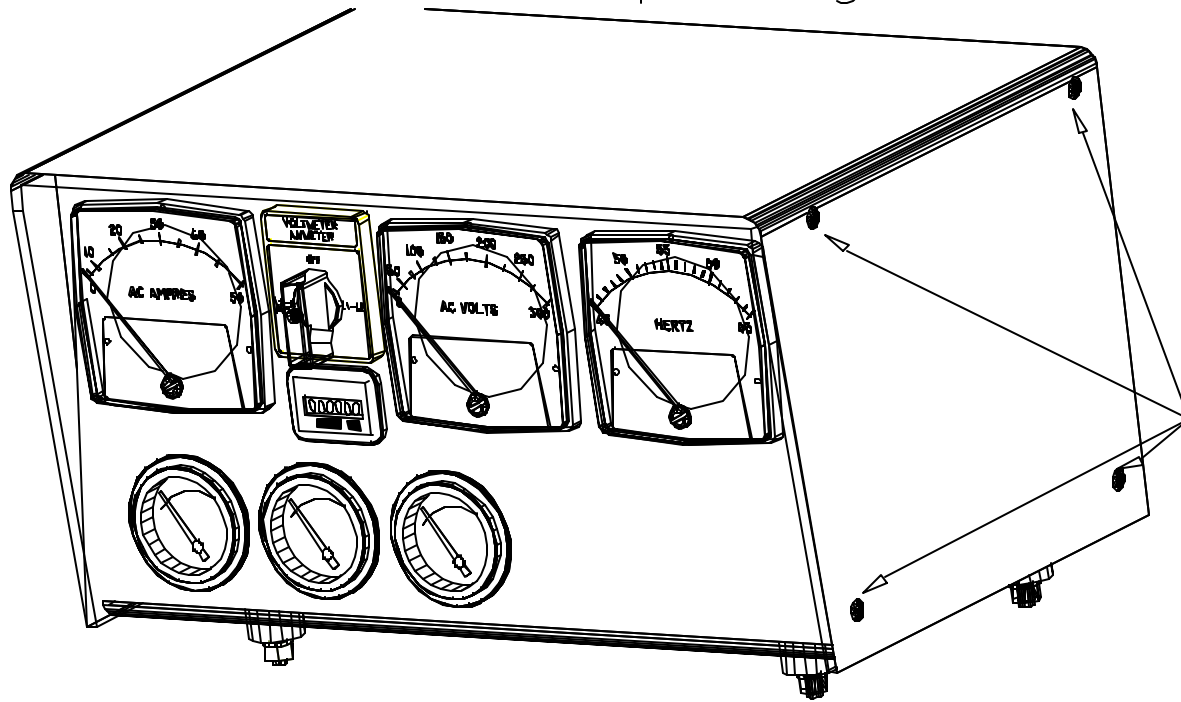

REMOVE THESE SCREWS
FROM EACH SIDE TO
REMOVE COVER.

To Remove Cover:

- 1) Remove the four(4) Phillips head screws from each side of the panel(eight screws total). See diagram.
- 2) Lift up and remove cover.
- 3) Save the screws to reassemble.

To Reinstall Cover:

- 1) Place the cover over the body of the cabinet, aligning the cover's straight edge with the rear of the panel.
- 2) Align the cover holes with the internal Tinnerman clips using a small screw driver or other pointed tool.
- 3) Loosely install the eight(8) Phillips head screws into the cover mounting holes.
- 4) When all the screws are loosely installed, tighten all screws with moderate pressure.

UNLESS OTHERWISE SPECIFIED:	Panelsource Engine & Generator Controls	DRAWN BY:	SCALE:
ALL DIMENSIONS INCHES		LJM	NONE
SIZE: A	TITLE:	CHECKED:	DATE:
DO NOT SCALE DRAWING	X-SERIES INSTRUCTIONS	DRAWING NUMBER:	07/09/03
		L1000	SHEET 1 OF 1